


FIRECOM®



UHW50x Wireless Headset Quick Start Guide

Basic features - controls

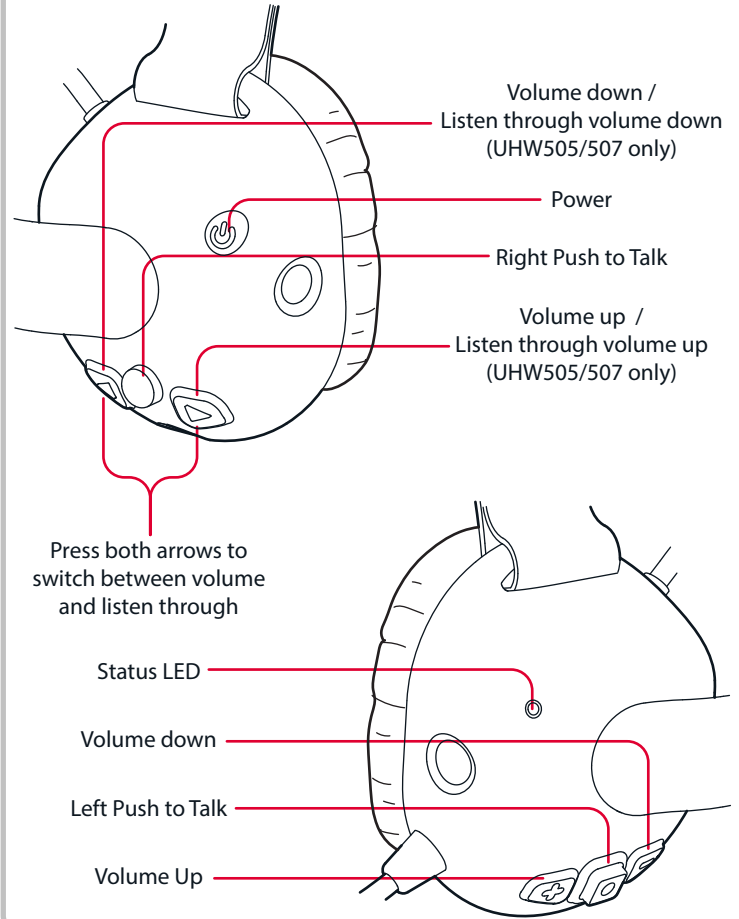

Sales

(503) 684-6647
(800) 527-0555



Service

(503) 684-6647
(800) 527-0555

(503) 620-2943
sales@firecom.com




(503) 620-2943
service@firecom.com

Complete manual available at
www.firecom.com

7340 SW Durham Rd.
Portland, OR 97224

600-0385-00 Rev C

Basic features - controls

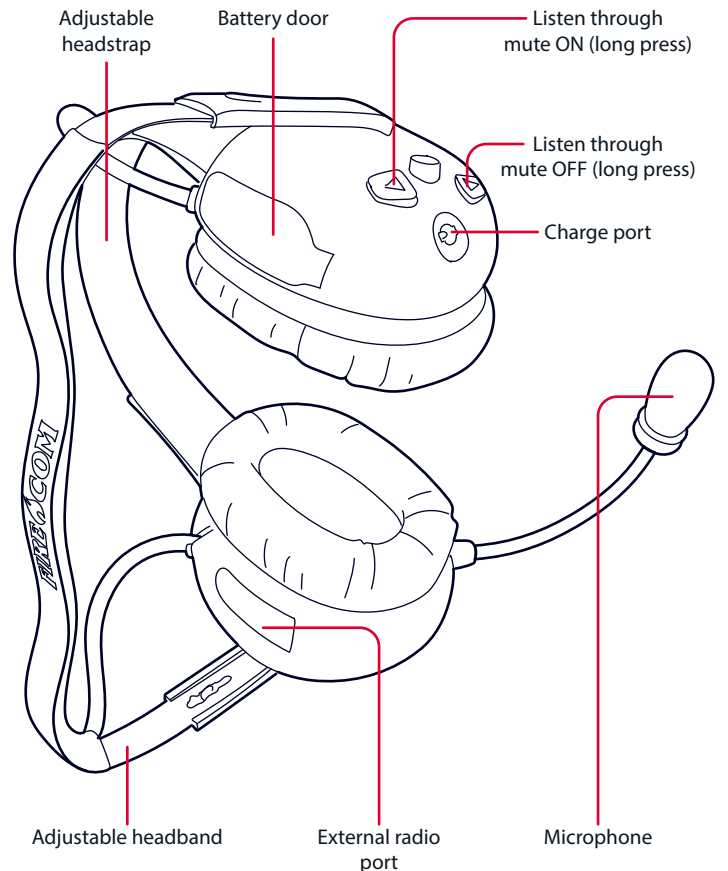


Status LED functionality

Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● ● On
- ● ● ● ● Bluetooth connected
- ● ● ● ● DECT pairing
- ● ● ● ● DECT connected
- ● ● ● ● DECT + Bluetooth connected

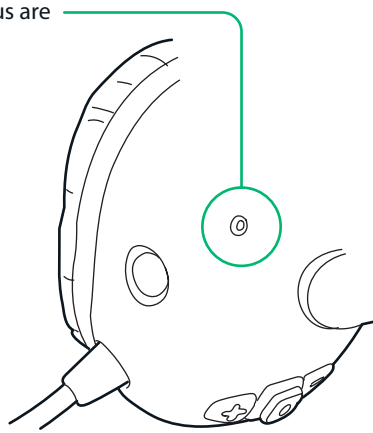

Battery Level

Number of pulses indicates battery charge level.



LED color will vary depending on connection type.


Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

- Charging
- Fully charged
- Charge fault

New Bluetooth Pairing (If Bluetooth equipped)

- 1: Turn off headset.
- 2: Turn on headset.
- 3: Headset enters Bluetooth pairing mode.

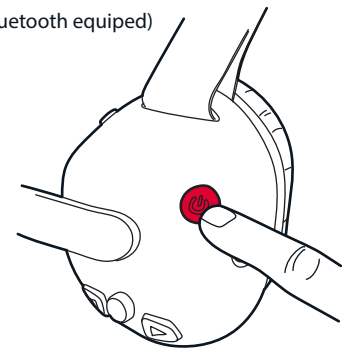

On Phone:



- 4: Search for "Sonetics-HS-XX".

Password is "0000".

Bluetooth Use

- Answer call → Press Left PTT button.
- End call → Press Left PTT button.

Mic positioning

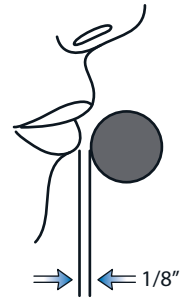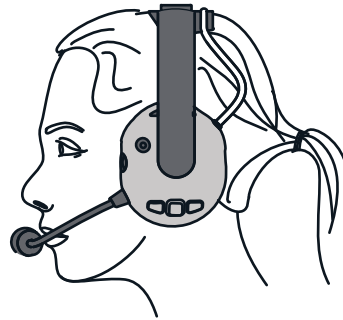


Position mic no more than 1/8" from lips.


DECT Pairing

For first use:


- 1: Place Base Station into pairing mode (see base station manual for details).

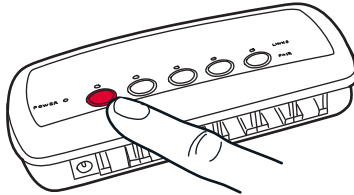


- 2: Push and hold "Push to talk", then press power. Hold "PTT" until status flashes red and green.

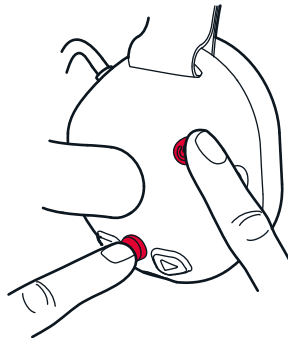


- 2: The status LED flashes green when connection is successful. If it does not, repeat the pairing process.

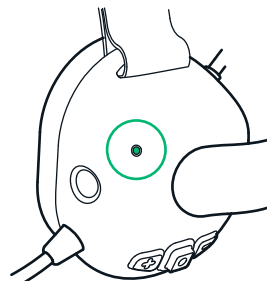

Headset charging

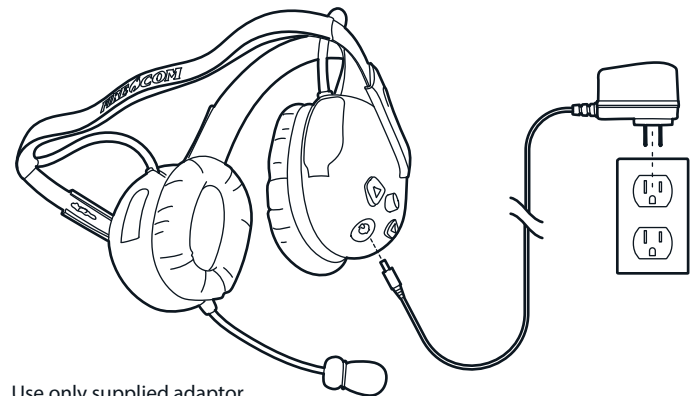

Use only supplied adaptor.

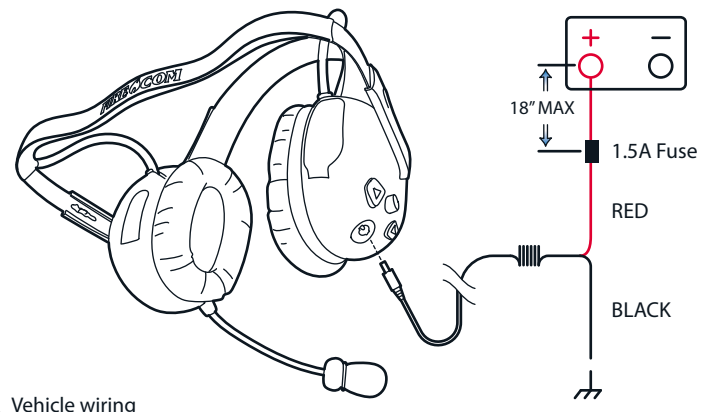

Vehicle wiring