



Support Solutions

Wireless Headset LED indicators

Product covered: UHW / FHW 10, 20, 40 series wireless headsets

Symptoms: Description of LED status indicators

Battery Charging

Unit Off, Charging	Steady ON	Flashing Slow
Green LED	Fully charged	
Red LED		Charging

Unit Operation

Unit On	Steady ON	Flashing Slow	Flashing Fast	3 beeps every 10 minutes	6 beeps every minute
Green LED	Connected to Base		Not Connected to Base		
Red LED		Low Battery	Very Low Battery		
Audible				Low Battery	Very Low Battery

Notice: Fuse Assembly Installation

FireCom fuse holder 330-0012-00 is to be installed within 18" from the battery source in-line with your charging cable assembly (420-0048-00) when power from a vehicle is used for recharging your wireless product.

Use only a 500mA fuse (supplied) with the charging cable assembly.