




FIRECOM®

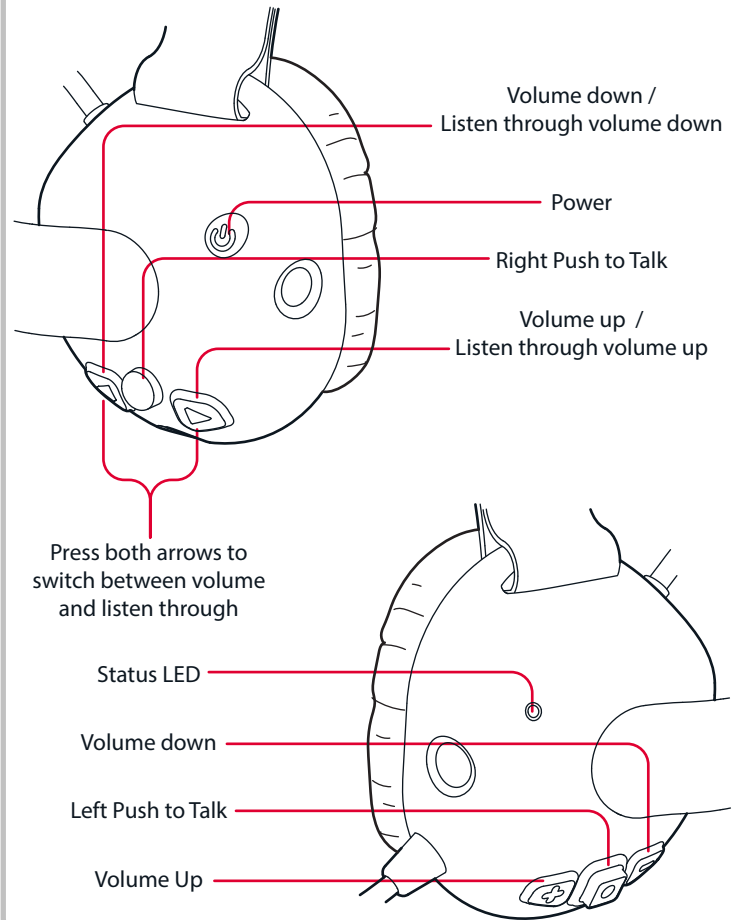

DW501BT Electronic Headset Quick Start Guide

Basic features - controls




<p>Sales</p> <p>(503) 684-6647 (800) 527-0555</p> <p>(503) 620-2943 sales@firecom.com</p>	 	<p>Service</p> <p>(503) 684-6647 (800) 527-0555</p> <p>(503) 620-2943 service@firecom.com</p>
--	--	--

Complete manual available at
www.firecom.com

7340 SW Durham Rd.
Portland, OR 97224


600-0399-00 Rev C

Basic features - controls

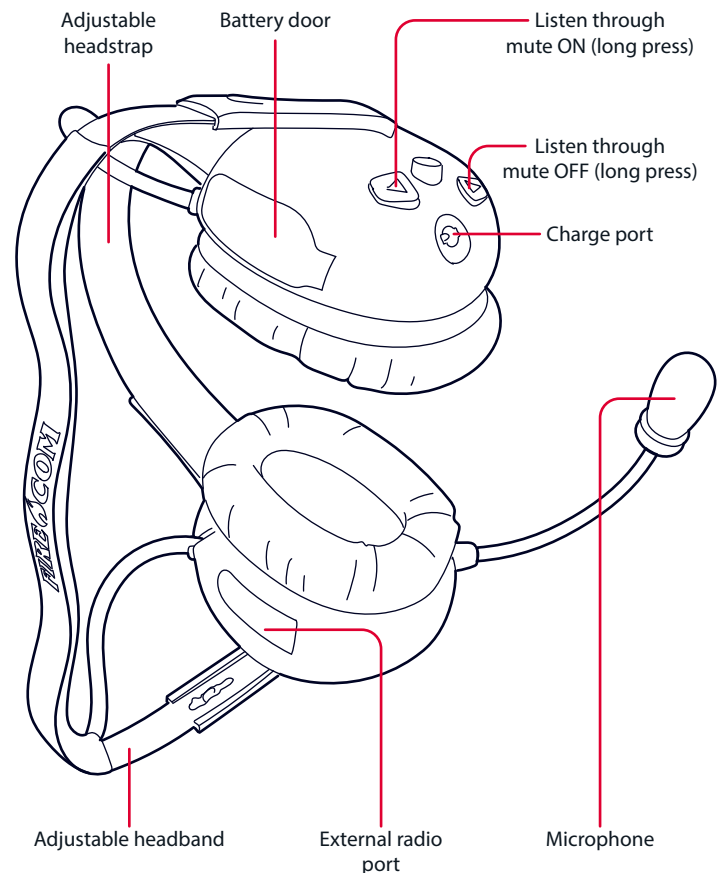

Status LED functionality

Battery level and connection status are both shown with the status LED.

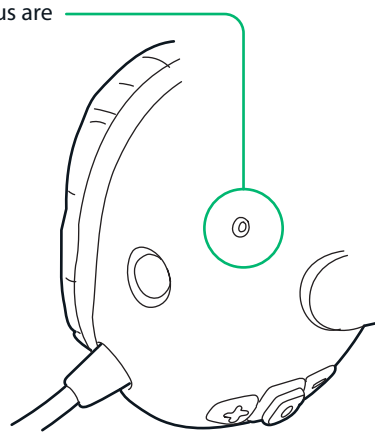

Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● ● On
- ● ● ● Bluetooth connected

Battery Level

Number of pulses indicates battery charge level.

- ———— [Battery icon with 1 bar]
- ● ———— [Battery icon with 2 bars]
- ● ● ———— [Battery icon with 3 bars]
- ● ● ● ———— [Battery icon with 4 bars]

LED color will vary depending on connection status.

Charge Status


When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

- (Red) Charging
- (Green) Fully charged
- (Red) Charge fault


Connecting a 2-way radio

For first use:

1: Remove ruggedizer.

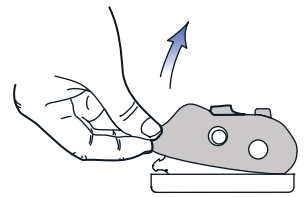


2: Cut along groove with sharp scissors.

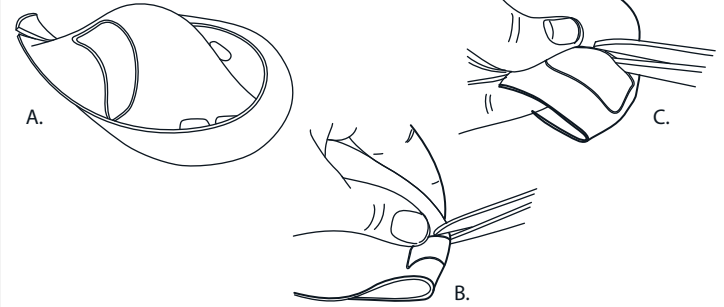

3: Replace ruggedizer.


4a: Open cover and plug in.

4b: Screw on connector.

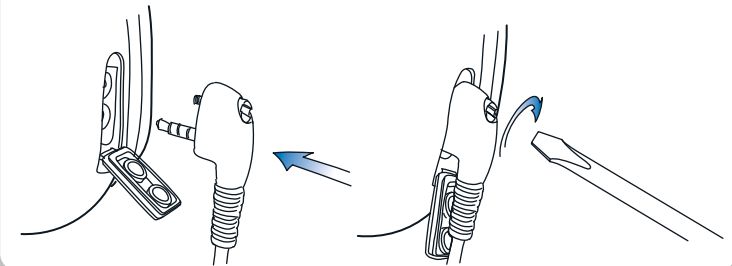

Mic positioning

Position mic no more than 1/8" from lips.

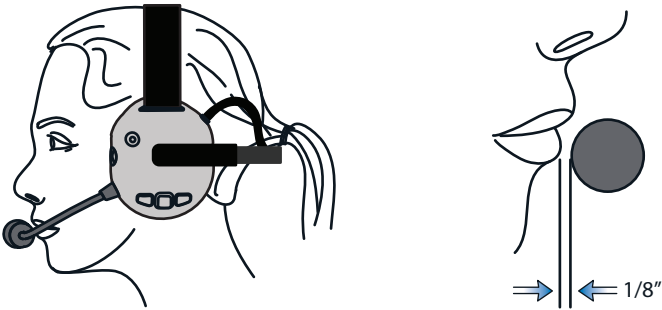


New Bluetooth Pairing

- 1: Turn off headset.
- 2: Turn on headset.
- 3: Headset enters Bluetooth pairing mode.



10 min.

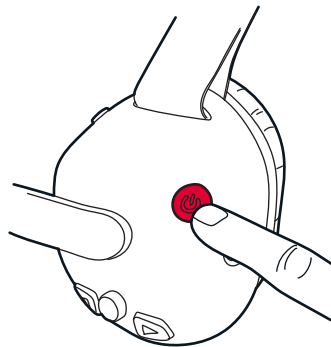

Password is "0000".


On Phone:

- 4: Search for "Sonetics-HS-XX".


Bluetooth Use

- Answer call → Press Left PTT button.
- End call → Press Left PTT button.

Headset charging

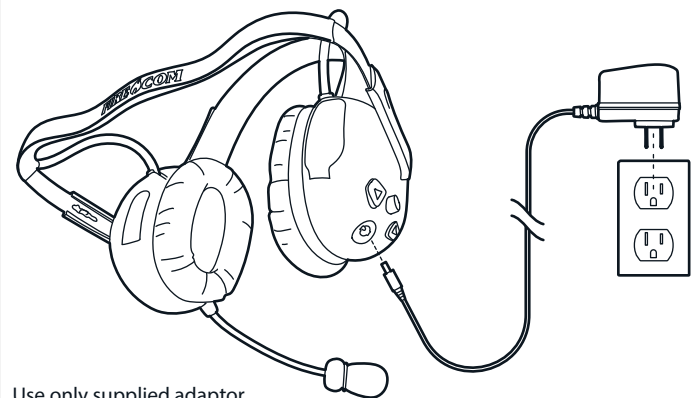

Use only supplied adaptor.

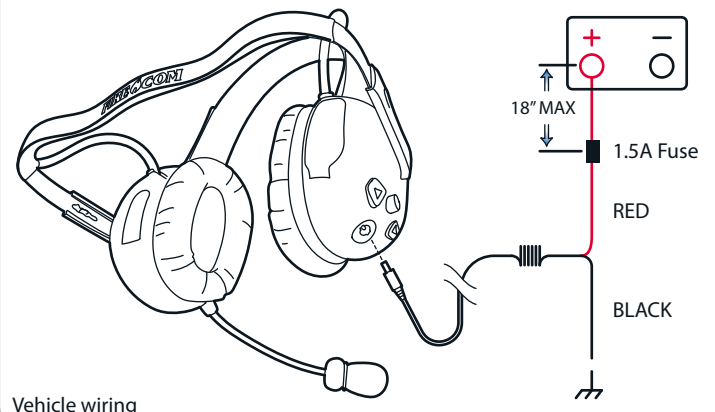

Vehicle wiring