


# FHW50X Wireless Headset Quick Start Guide

## Basic features - controls

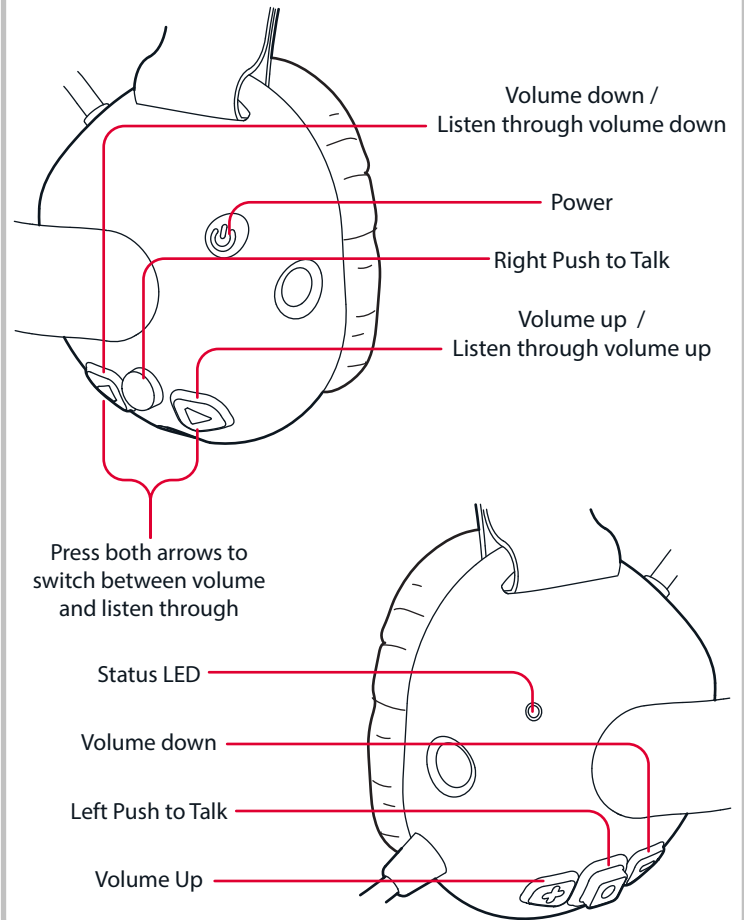

### Sales



### Service

(503) 684-6647  
(800) 527-0555

(503) 684-6647  
(800) 527-0555

(503) 620-2943  
sales@firecom.com




(503) 620-2943  
service@firecom.com

Complete manual available at  
[www.firecom.com](http://www.firecom.com)

7340 SW Durham Rd.  
Portland, OR 97224

600-0384-00 Rev D

## Basic features - controls

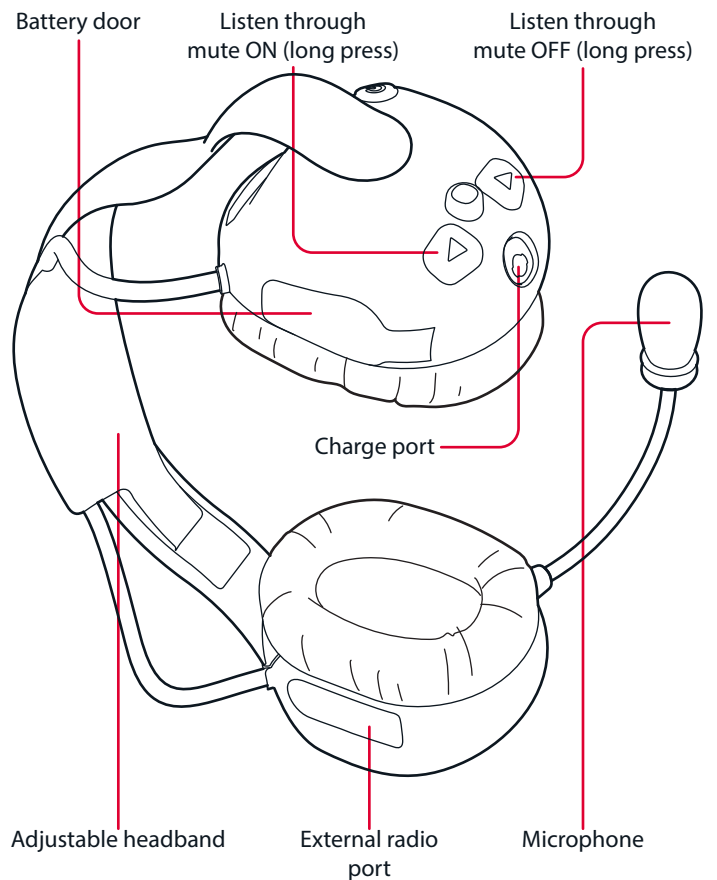


## Status LED functionality

Battery level and connection status are both shown with the status LED.

### Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● ● On
- ● ● ● Bluetooth connected
- ● ● ● ● DECT pairing
- ● ● ● DECT connected
- ● ● ● DECT + Bluetooth connected

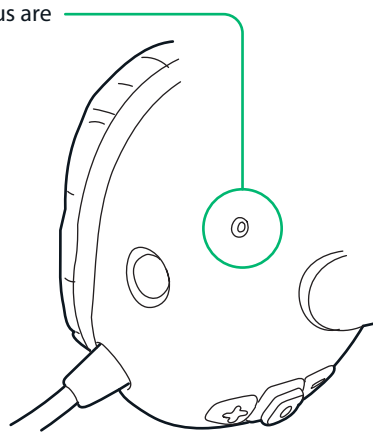

### Battery Level

Number of pulses indicates battery charge level.



LED color will vary depending on connection type.


### Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

- Charging
- Fully charged
- Charge fault

## New Bluetooth Pairing

- 1: Turn off headset.
- 2: Turn on headset.
- 3: Headset enters Bluetooth pairing mode.


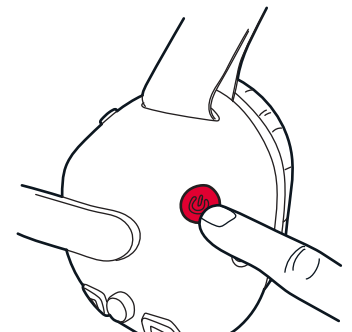


- On Phone:
- 4: Search for "Sonetics-HS-XX". Password is "0000".

### Bluetooth Use

- Answer call → Press Left PTT button.
- End call → Press Left PTT button.

## Mic positioning

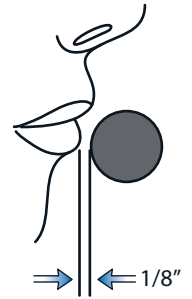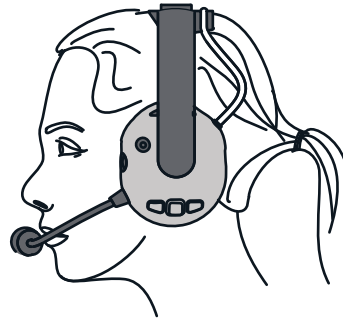


Position mic no more than 1/8" from lips.


## DECT Pairing

For first use:


- 1: Place Base Station into pairing mode (see base station manual for details).

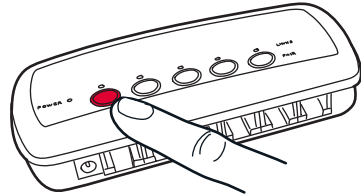


- 2: Push and hold "Push to talk", then press power. Hold "PTT" until status flashes red and green.

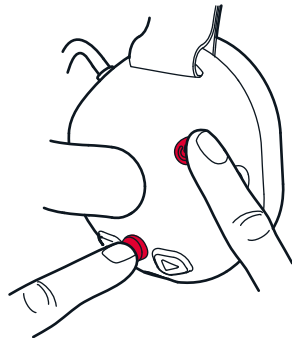


- 2: The status LED flashes green when connection is successful. If it does not, repeat the pairing process.

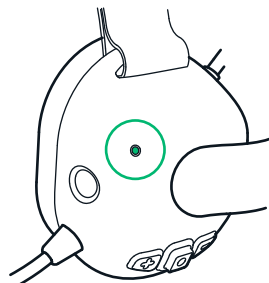

## Headset charging

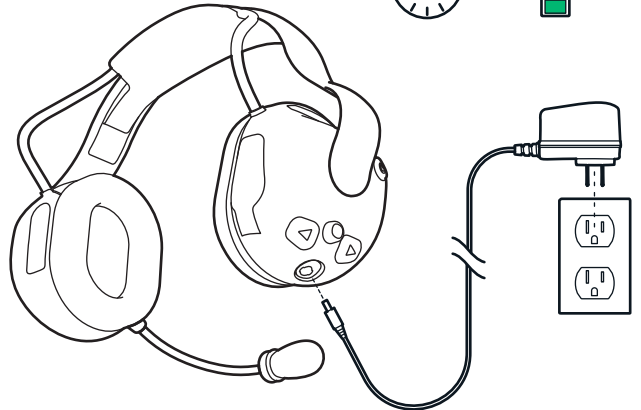

Use only supplied adaptor.

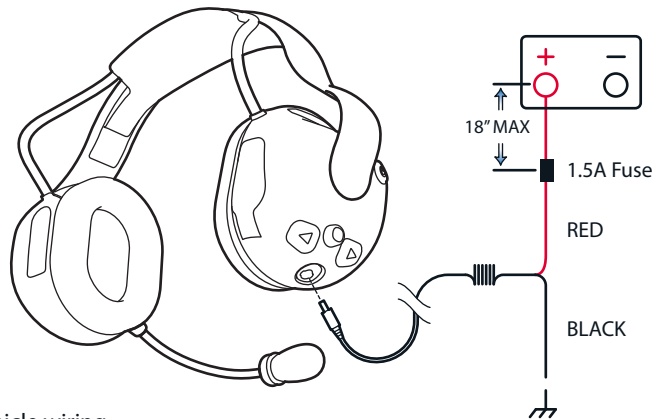

Vehicle wiring