


# FIRECOM®



## DW501 Electronic Headset Quick Start Guide

### Basic features - controls

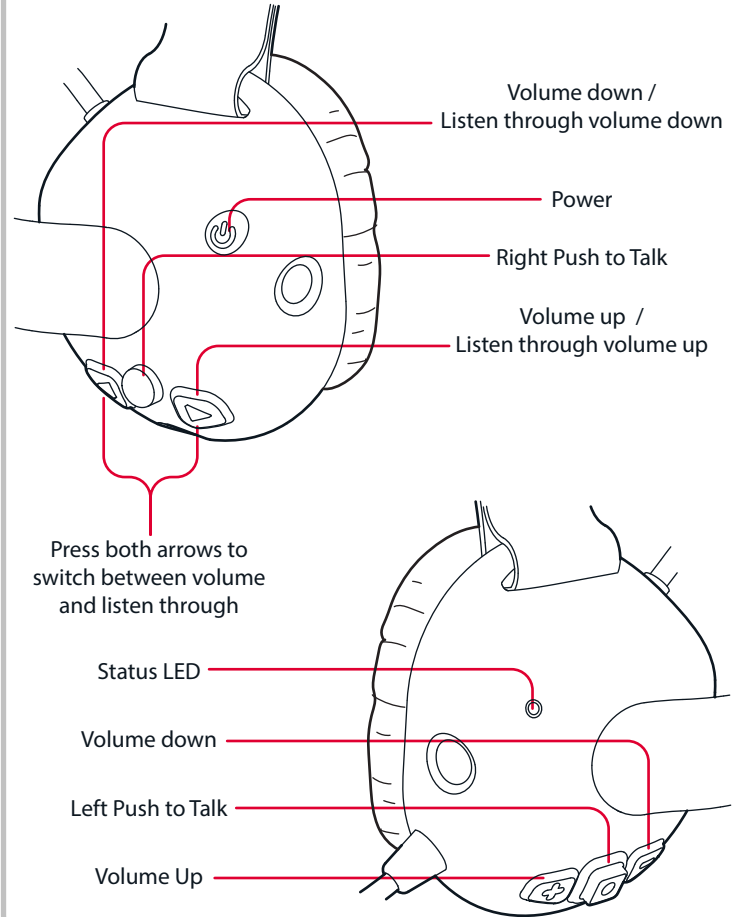

#### Sales

(503) 684-6647  
(800) 527-0555



#### Service


(503) 684-6647  
(800) 527-0555

(503) 620-2943  
sales@firecom.com



(503) 620-2943  
service@firecom.com

### Basic features - controls

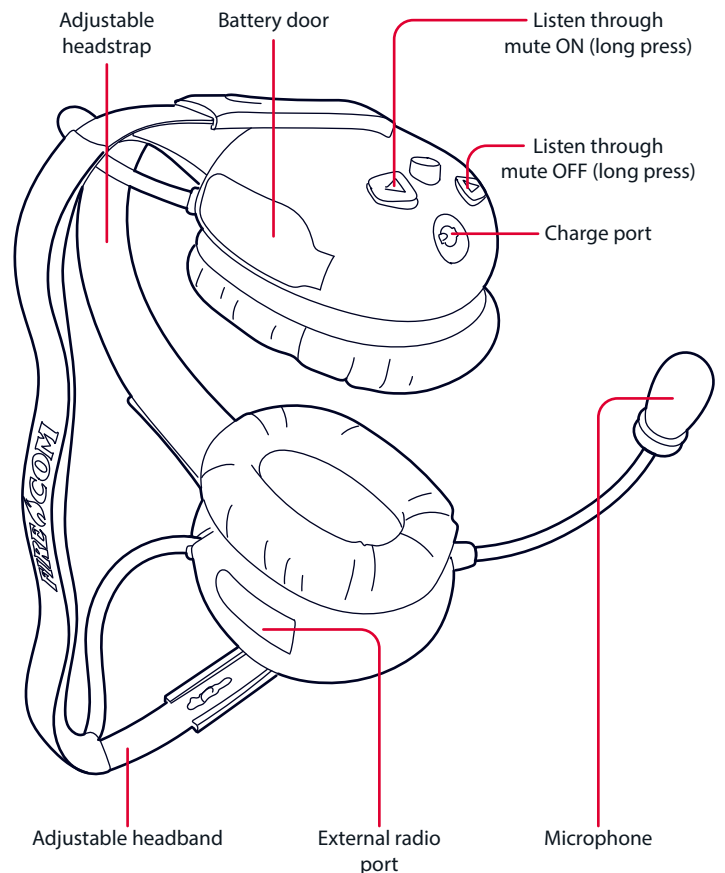


Complete manual available at  
[www.firecom.com](http://www.firecom.com)

7340 SW Durham Rd.  
Portland, OR 97224

### Status LED functionality

Battery level and connection status are both shown with the status LED.

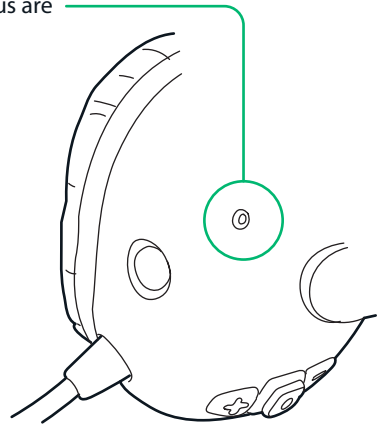

#### Connection Status

When powered on, a flashing red LED indicates normal operation.

● ● ● ● ● On


#### Battery Level

Number of pulses indicates battery charge level.




#### Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

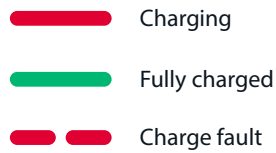

### Mic positioning

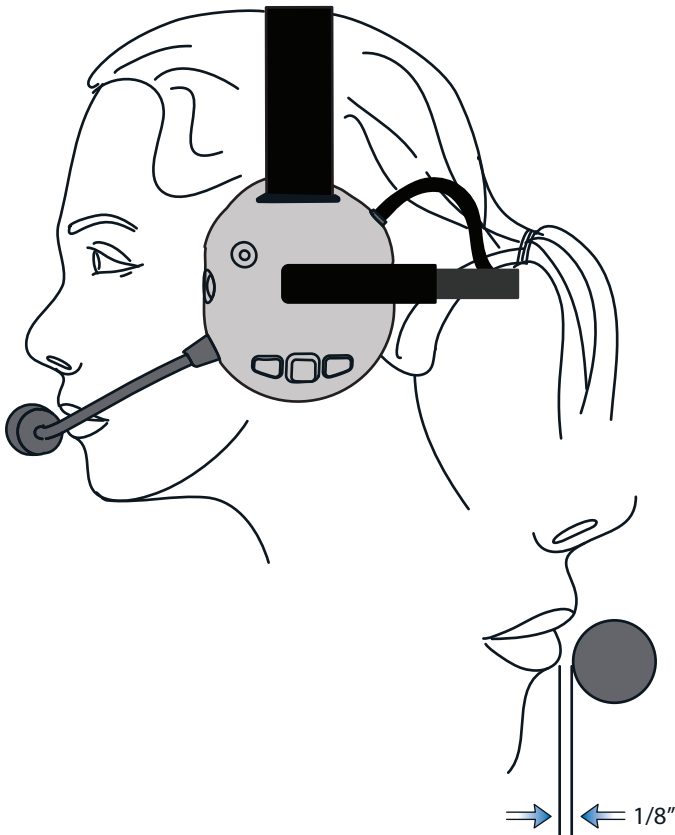


Position mic no more than 1/8" from lips.


### Connecting a 2-way radio

For first use:

1: Remove ruggedizer.

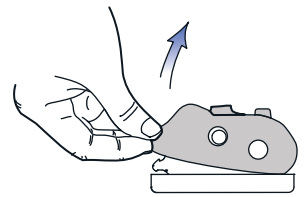


2: Cut along groove with sharp scissors.

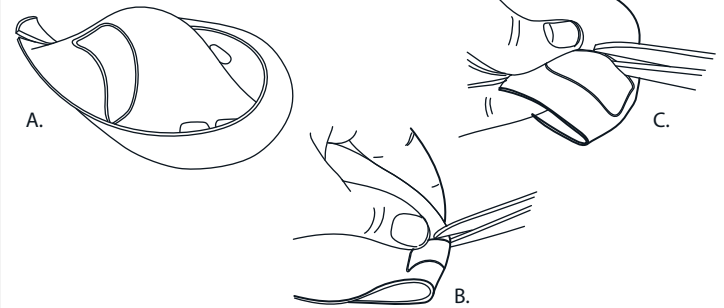


3: Replace ruggedizer.

4a: Open cover and plug in.


4b: Screw on connector.

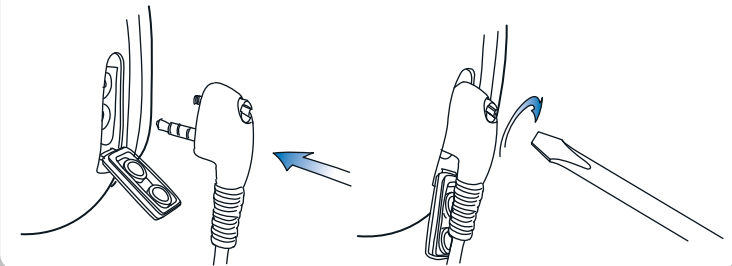

### Headset charging

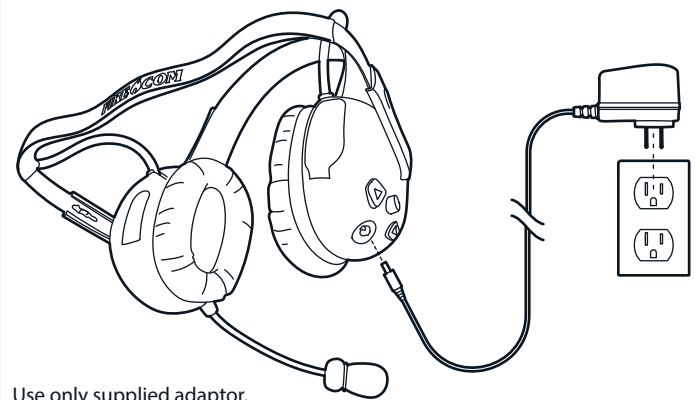

Use only supplied adaptor.

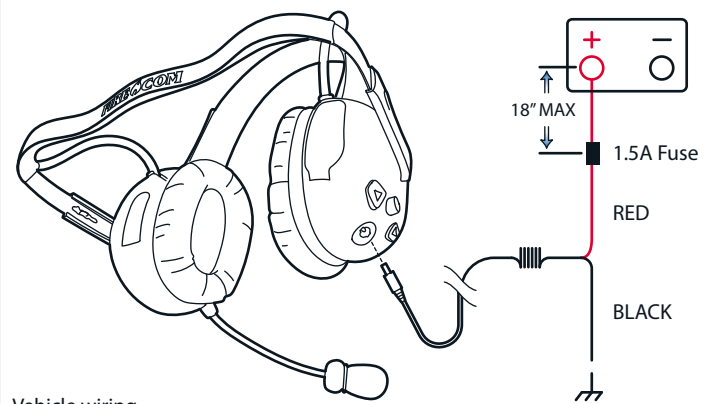

Vehicle wiring