



Sonetics[®]

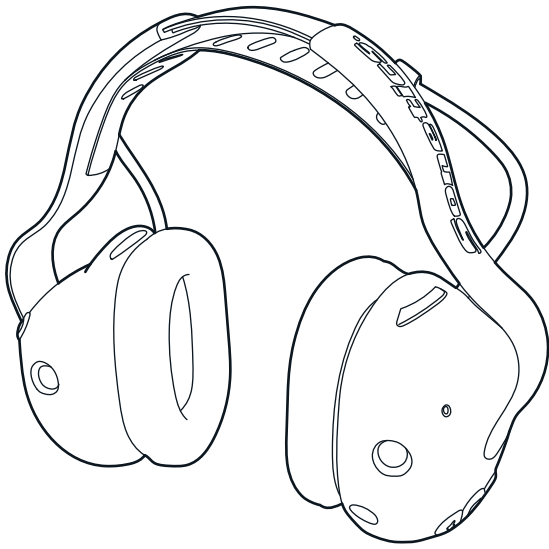

APX372
Electronic Headset
Quick Start Guide

Basic features - controls

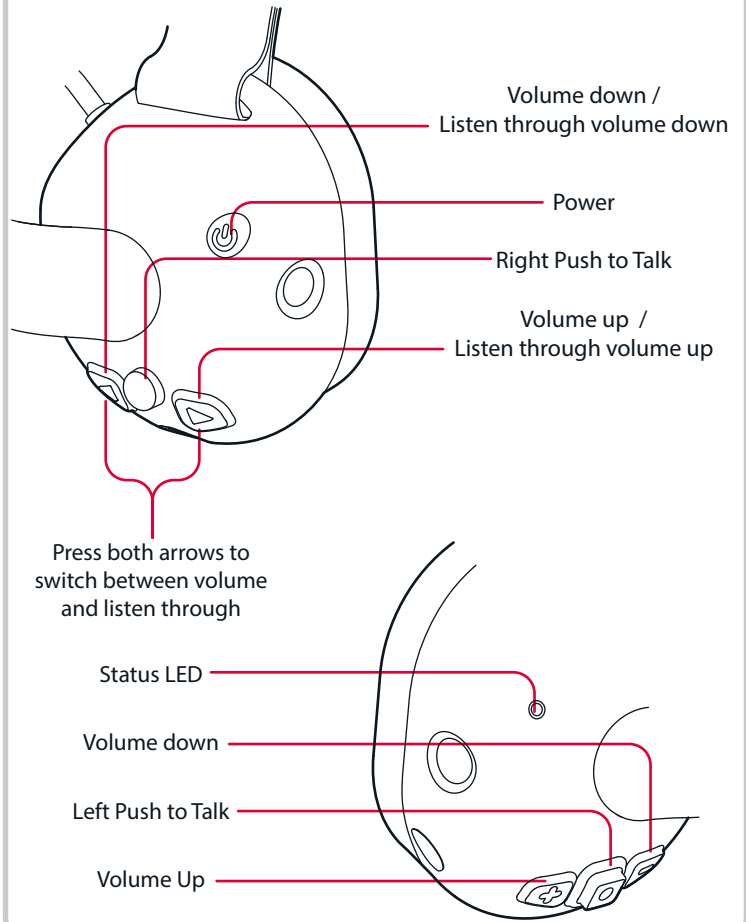

Sales



Service

(503) 684-7080
(800) 833-4558


(503) 684-7080
(800) 833-4558



(503) 620-2943
sales@soneticscorp.com

(503) 620-2943
service@soneticscorp.com

Basic features - controls

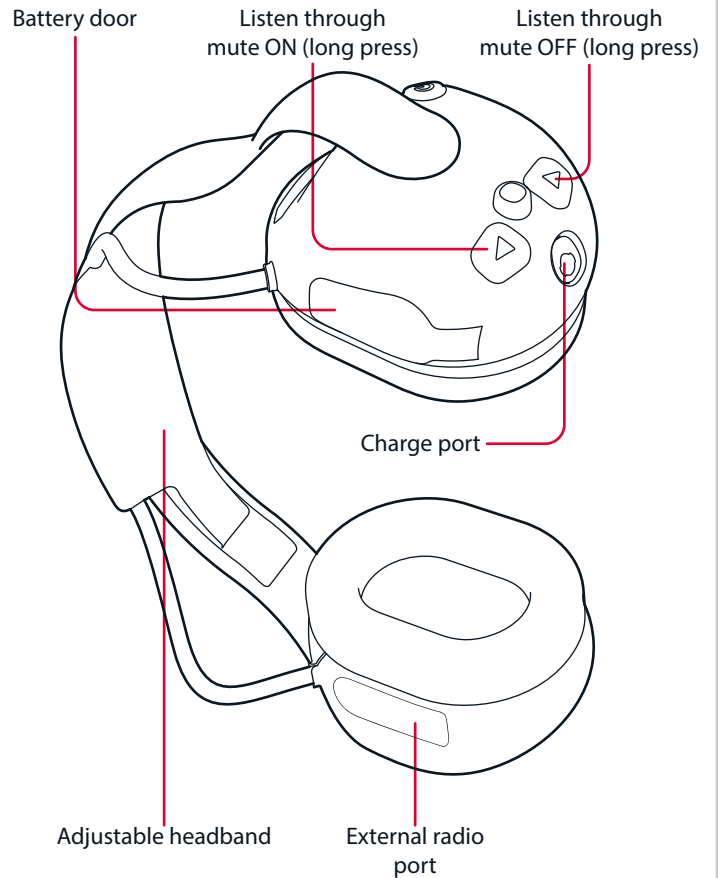

Complete manual available at
www.soneticscorp.com

7340 SW Durham Rd.
Portland, OR 97224


Status LED functionality

Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, the color of the LED flashes indicates connection status.

● ● ● ● ● On

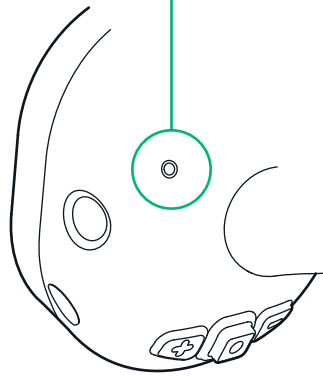

Battery Level


Number of pulses indicates battery charge level.



LED color will vary depending on connection type.

Charge Status


When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

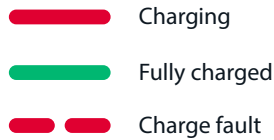

Headset charging



Use only supplied adaptor.

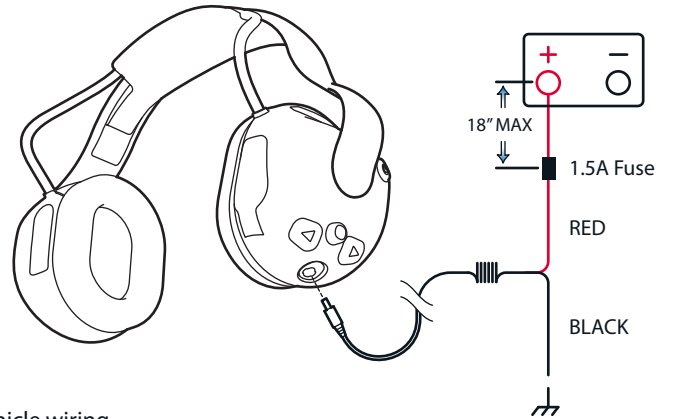


Vehicle wiring


Connecting a 2-way radio

For first use:

1: Remove ruggedizer.

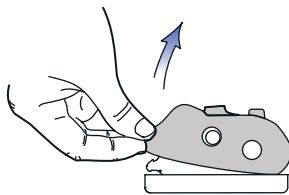


2: Cut along groove with sharp scissors.

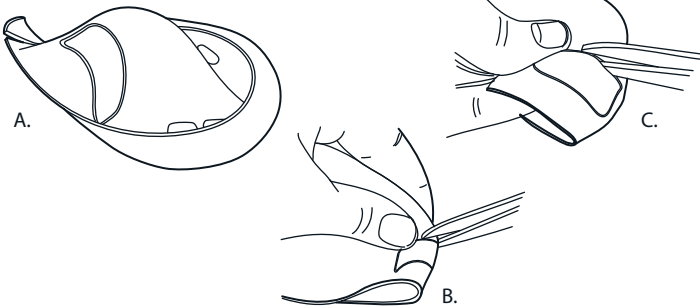

3: Replace ruggedizer.

4a: Open cover and plug in.

4b: Screw on connector.

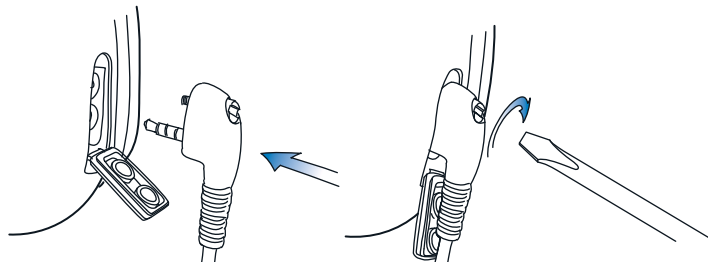

Section intentionally left blank