



Sonetics[®]

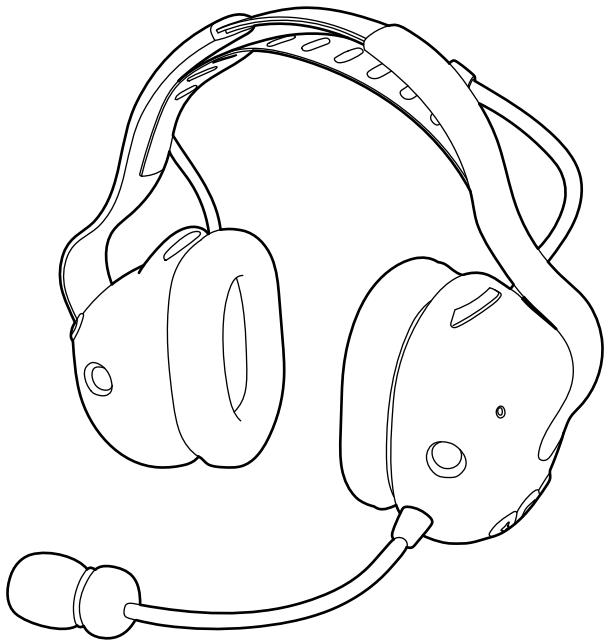


APX377
ELECTRONIC HEADSET
Quick Start Guide


BASIC FEATURES – CONTROLS

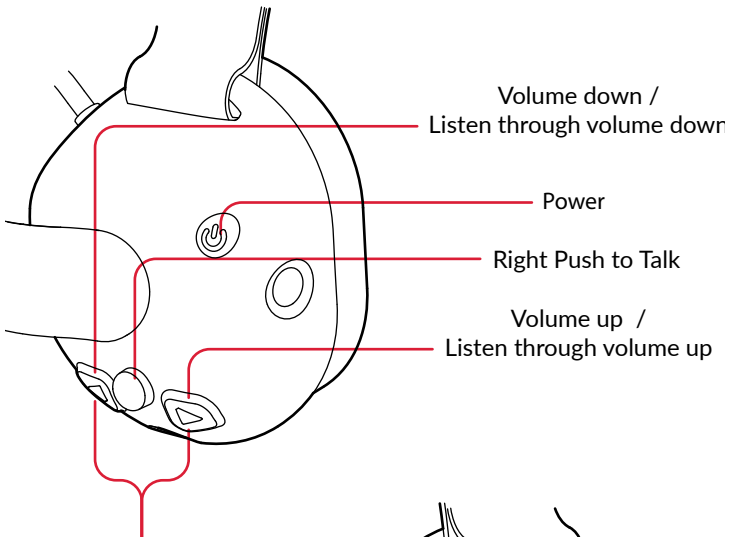

Press both arrows to
switch between volume
and listen through

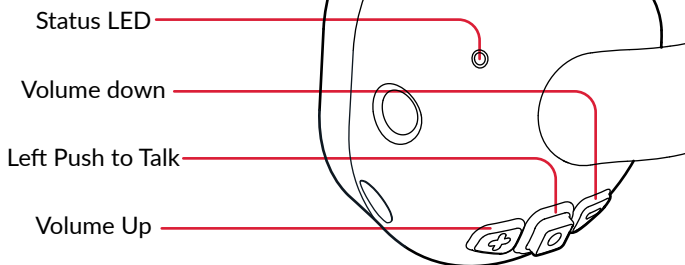

BASIC FEATURES – CONTROLS

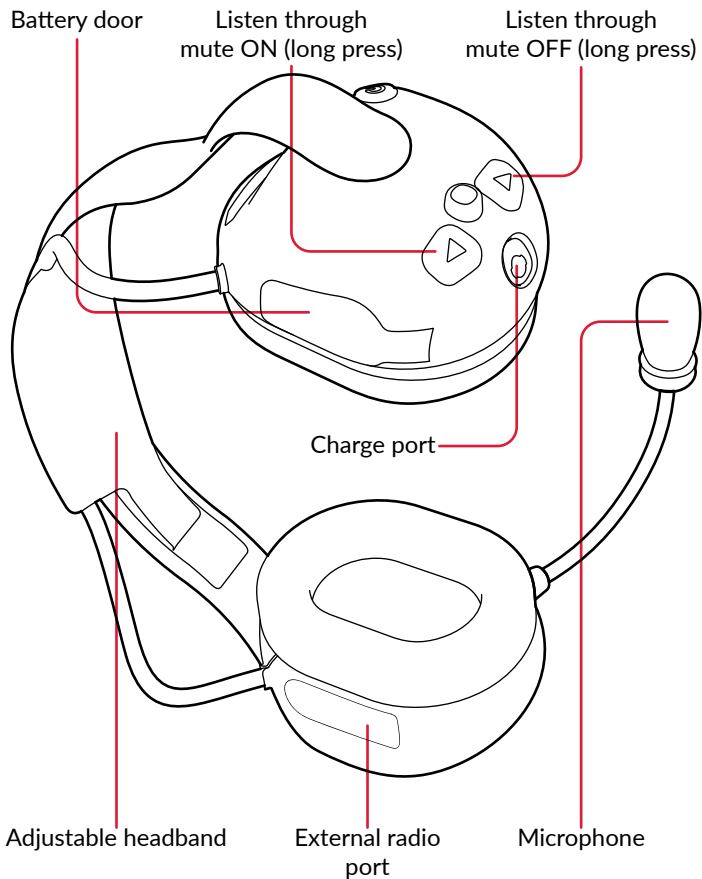


STATUS LED FUNCTIONALITY

Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● On
- ● ● ● DECT pairing
- ● ● ● DECT connected

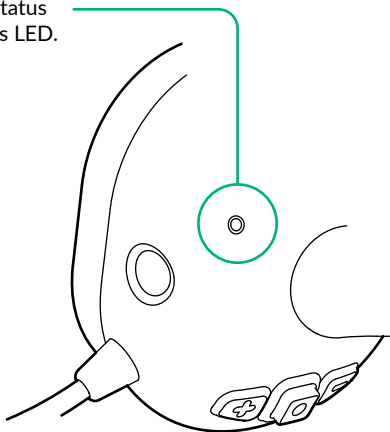

Battery Level

Number of pulses indicates battery charge level.




LED color will vary depending on connection type.

Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

- Charging
- Fully charged
- Charge fault

MIC POSITIONING

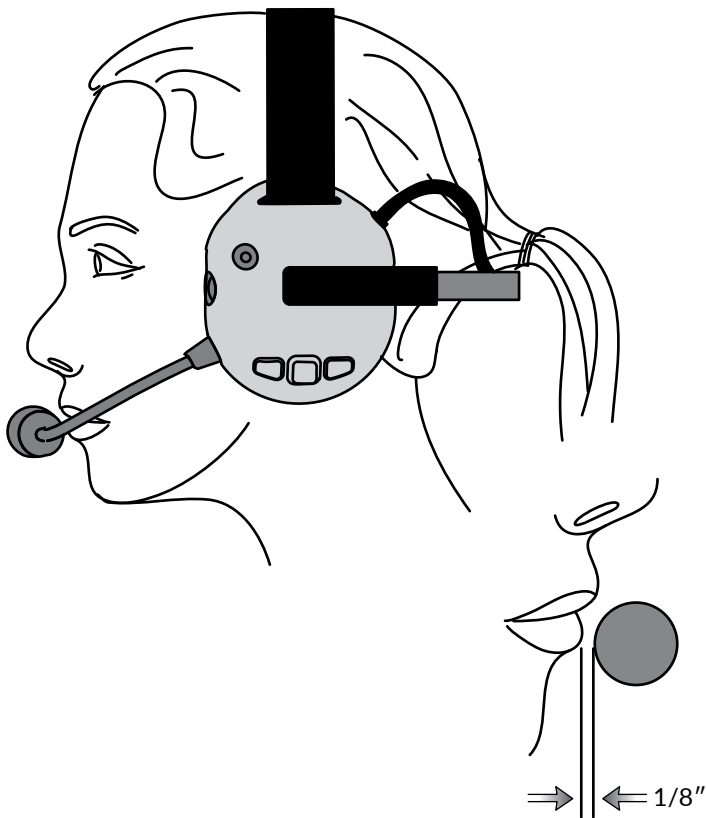


Position mic no more than 1/8" from lips.


DECT PAIRING

For first use:


- 1: Place Base Station into pairing mode (see base station manual for details).

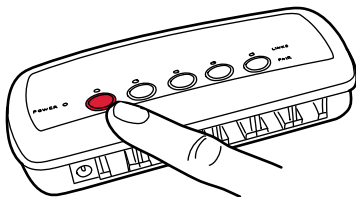

- 2: Push and hold Push To talk and Power until status LED flashes red and green.

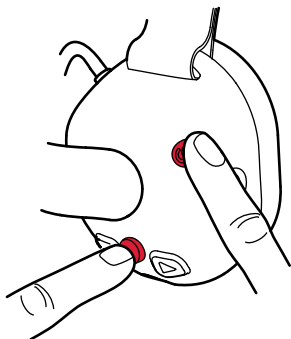

- 3: The status LED flashes green when connection is successful. If it does not, repeat the pairing process.

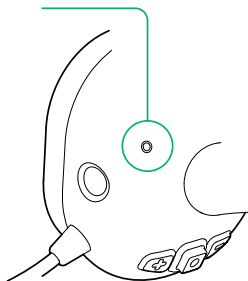


HEADSET CHARGING




4hr



24hr

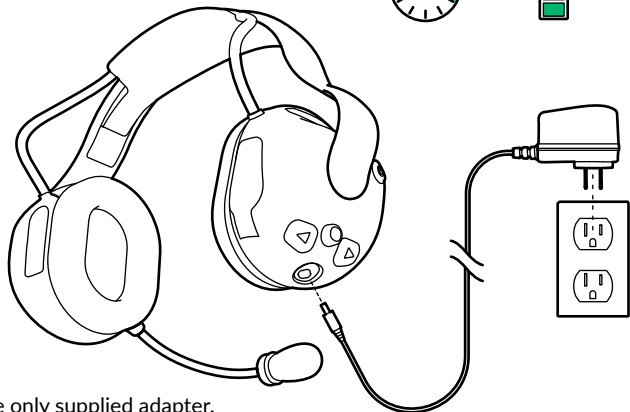

Use only supplied adapter.

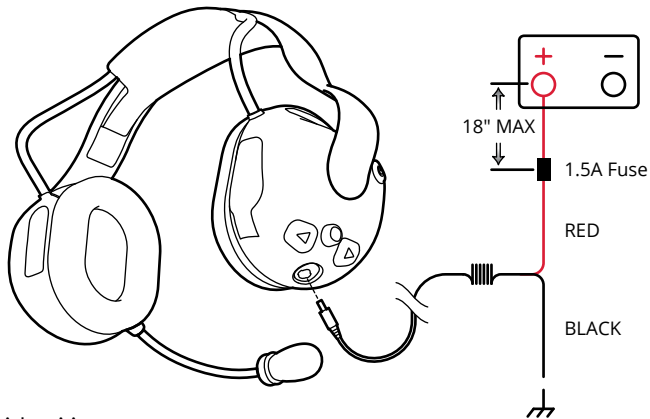

Vehicle wiring.

Complete manual available at
soneticscorp.com/support



www.soneticscorp.com

800-833-4558

17600 SW 65TH Ave
Lake Oswego, OR 97035 USA

© 2019 Sonetics Corporation. All Rights Reserved.
The information in this document is subject to change without notice.
No part of this document may be copied or reproduced in any form
without the prior written consent of Sonetics Corporation.