



# Sonetics®

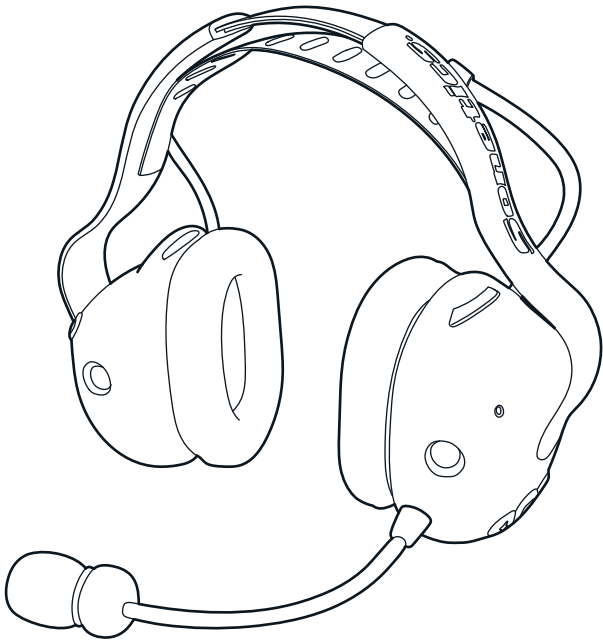

## APX377 Electronic Headset Quick Start Guide

### Basic features - controls

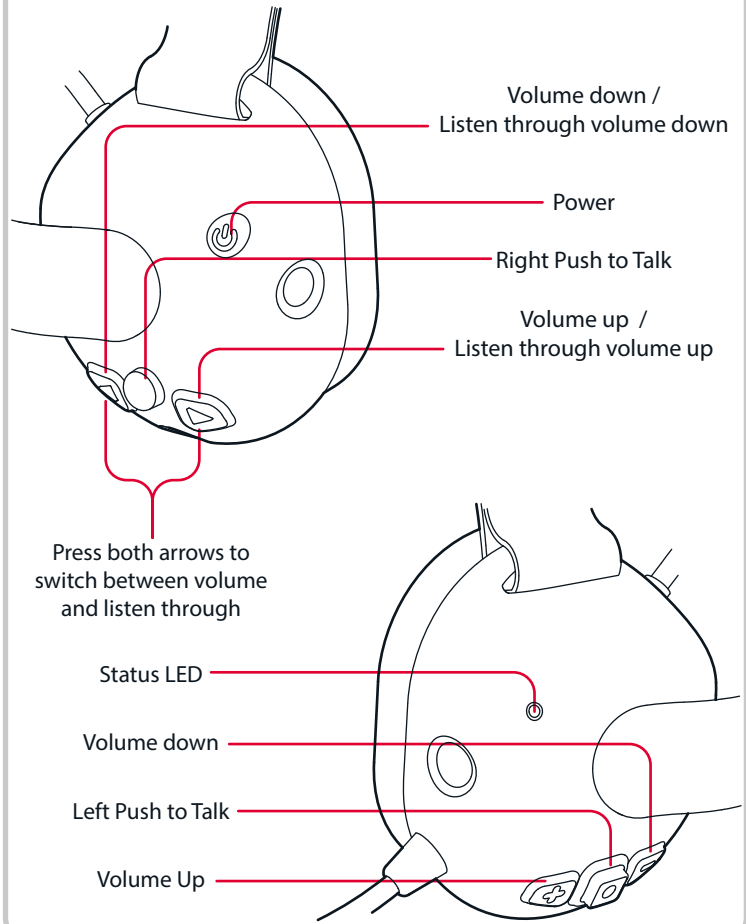

#### Sales



#### Service

(503) 684-7080  
(800) 833-4558

(503) 684-7080  
(800) 833-4558



(503) 620-2943  
sales@soneticscorp.com


(503) 620-2943  
service@soneticscorp.com

Complete manual available at  
[www.soneticscorp.com](http://www.soneticscorp.com)

7340 SW Durham Rd.  
Portland, OR 97224

600-3062-00 Rev D

### Basic features - controls

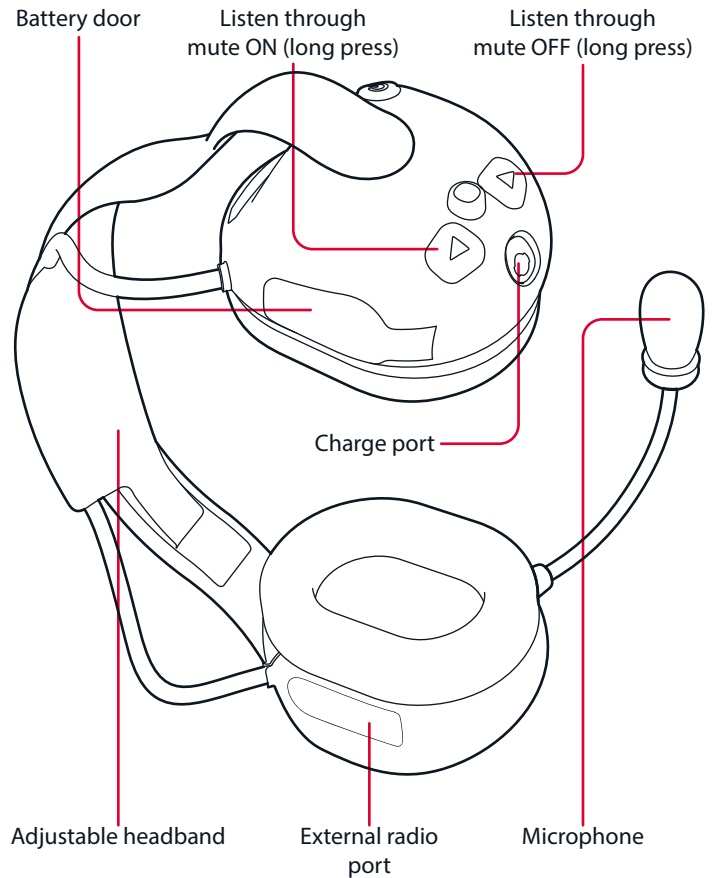


## Status LED functionality

Battery level and connection status are both shown with the status LED.

### Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● ● On
- ● ● ● ● DECT pairing
- ● ● ● ● DECT connected

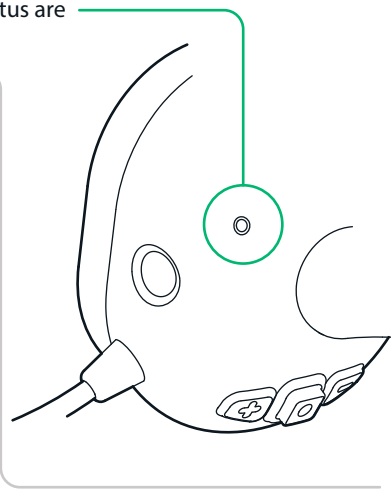

### Battery Level

Number of pulses indicates battery charge level.




LED color will vary depending on connection type.

### Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

- Charging
- Fully charged
- Charge fault

## Mic positioning

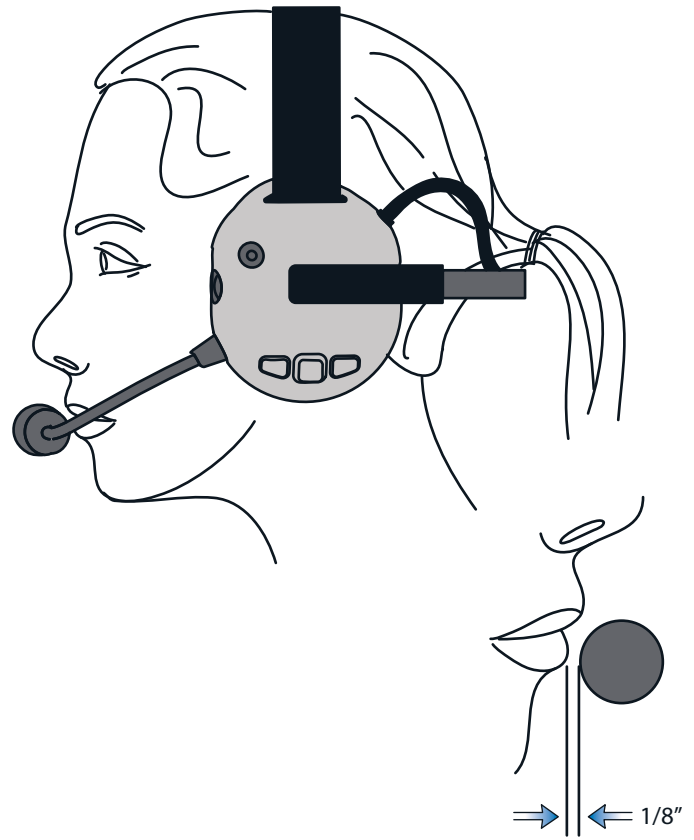


Position mic no more than 1/8" from lips.


## DECT Pairing

For first use:


1: Place Base Station into pairing mode (see base station manual for details).

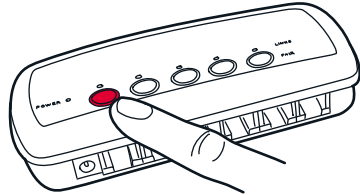


2: Push and hold Push to talk and Power until status LED flashes red and green.

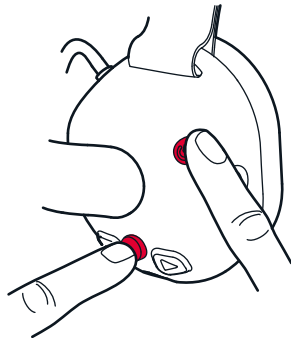


2: The status LED flashes green when connection is successful. If it does not, repeat the pairing process.

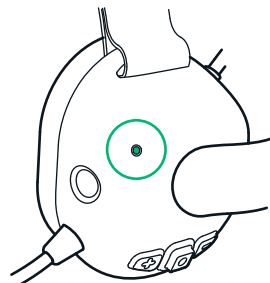

## Headset charging

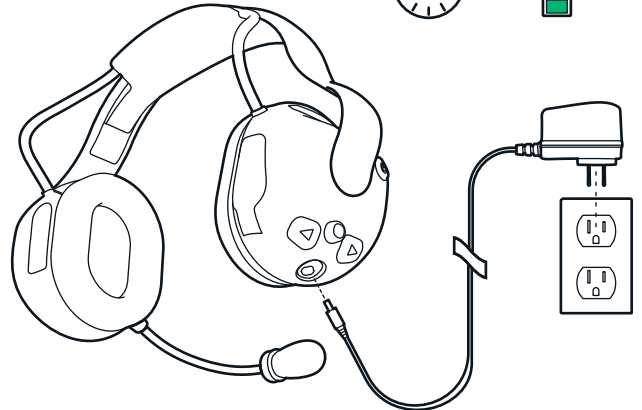

Use only supplied adaptor.

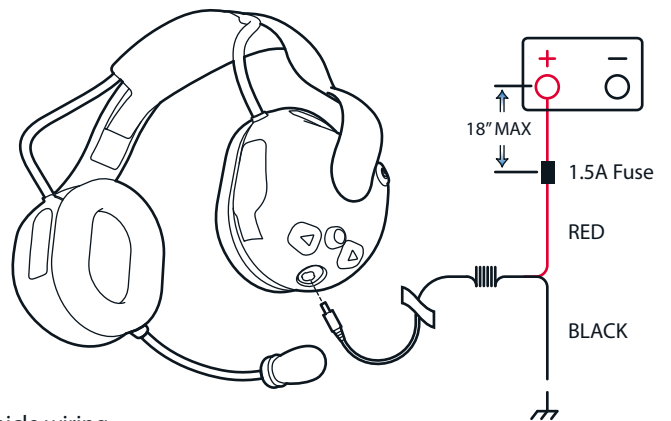

Vehicle wiring