

SPLIT PUSH-TO-TALK (PTT)

Split Push-to-Talk lets users transmit over either a ComHub-connected portable radio and/or a radio direct-wired to the headset.

With Split PTT active, the **RIGHT PTT** (●) button transmits over the radio connected to the ComHub (the DECT7 connection). **LEFT PTT** (■) transmits over the radio direct-wired to the headset.



HEADSET PUSH-TO-TALK MODES

- **Dual PTT** (default) – When held, either of the Headset’s PTT (■ or ●) buttons will transmit over a ComHub-connected portable radio. To key a direct-wired portable radio, use the PTT button on the portable radio.
- **Split PTT** – When held, **LEFT PTT** (■) transmits over a direct-wired portable radio. **RIGHT PTT** (●) transmits over a ComHub-connected portable radio.

ACTIVATING THE SPLIT PUSH-TO-TALK FEATURE

To enable the Split Push-to-Talk feature, access the Advanced Menu on your Headset:

1. Press **POWER** (⏻) to turn off the Headset.
2. Press and hold the **FWD** (▶) and **BACK** (◀) buttons simultaneously, then press and hold the **POWER** (⏻) button until the voice prompt announces “Advanced Menu.” When you hear the voice prompt, immediately release all three buttons.
3. Press **MENU** (■) to scroll through menu options until the voice prompt announces “Dual PTT.”
4. Press **PLUS** (+) or **MINUS** (–) until the voice prompt announces “Split PTT.”
5. Press the **RIGHT PTT** (●) button to save and exit.